

Main instructions

Powered by a rectangular 9v alkaline battery (not supplied). The battery must be placed in the black box positioned inside the door

You have a maximum of 10 seconds for each key entry

Unique variable 6-10 numbers/letters code

The lock is provided with the following factory code: 204060

The factory code shall be changed as the safe is being put into operation by the end user

No simple codes which are easy to guess (e.g. 1, 2, 3, 4, 5, 6) shall be chosen for the coding. No personal data (e.g. birthdays) or other data that could be derived from having knowledge about the code holder shall be chosen for the coding.

Ensure that you only program the lock when the door is open


After changing the code always try the code several times with the door open

When an invalid code is entered for the third consecutive time, the lock blocks for two minutes leaving the red LED on

The lock has Time Delay. Long Time Delays imply higher battery consumption

Caution! Don't forget your code, the lock can not be used anymore

Temperature of use: from 0° to 50° C

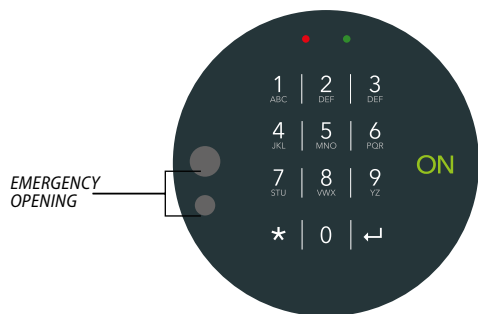

OPENING THE LOCK

Press **ON**

Enter the set code

Press **↵**

After 5/6 seconds turn or pull the handle and open the door

CLOSING THE LOCK

Close the door, turn the handle and press **ON**

Press **★**

CHANGING OPENING CODE

The door and the lock must be open, the bolts expanded (out)

Press **ON**

Press **★** and wait 5 seconds

Press **ON**

Enter the opening code already set

Press **★** and **↵**

Enter the new code

Press **↵**

Enter the new code again

Press **↵**

OPENING WITH SET TIME DELAY

Press **ON**

Enter the set code

Press **↵**

The Time Delay starts

The opening window starts

Enter the code again

Press **↵**

After 5/6 seconds turn or pull the handle and open the door

SETTING THE TIME DELAY

The door and the lock must be open

Time Delay: the time between the first and second code entry in minutes
Opening window: the period of time in minutes during which the code can be entered a second time and the lock can be opened

Press **ON**

Press **↵**

Enter a 3-digit code of which:

- The first 2 digits define the Time Delay in minutes (from 00 to 99)
- The third digit defines the Opening Window in minutes (from 1 to 9)

Press **↵**

Enter the 3 digits again

Press **↵**

PARTICULAR SIGNALS

- Wrong operation / code
- Exhausted battery

EMERGENCY OPENING

If the battery is completely exhausted, the contacts has oxidised or hasn't been used for a long time, it is possible to open the lock by powering it from the outside.

Place a battery (rectangular 9V alkaline type) on the round contacts on the keyboard, open the lock and substitute the battery inside.

IMPORTANT: do not detach the battery until the lock is fully opened (wait for the four beeps signalling "OK opened").

PARTICULAR CASES

THE LOCK DOES NOT OPEN

- The lock does not emit any audible tone at all: the battery is exhausted. Open the lock following the procedure "Emergency opening".
- The lock emits 4 beeps that mean "OK opened" but fails to open completely, and if other keys are pressed an error signal is emitted: press **★**, the lock closes again or the lock re-closes and reopens immediately and you can repeat the opening procedure.

THE LOCK DOES NOT CLOSE

- Pressing the key **★** the lock remains open, emits four beeps and the electronics remain on: check if the handle is properly turned and press **★**.
- Pressing the key **★** an error signal is emitted: repeat the opening and closing procedure.